TEL：1-866-XANATOS

INSTALLATION INSTRUCTIONS

BLACK MODULAR GRILLE GUARD FOR CHEVY COLORADO 23-26

(Excl. ZR2)

PART #17GC23MA

PROTECTED BY ONE OR MORE PATENT

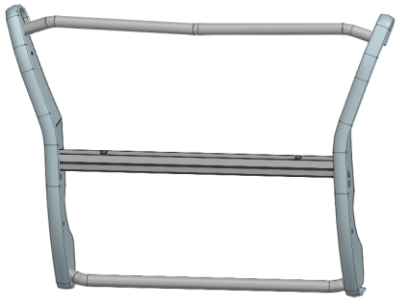
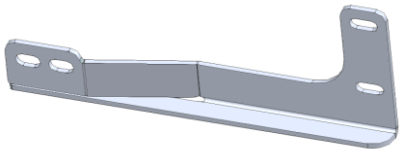
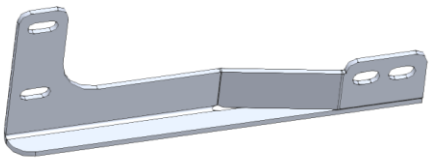
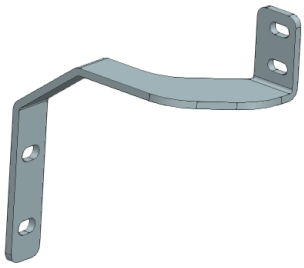
Before Installation












- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly way.

Care and Cleaning


- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

Parts list


NO.	QTY	NAME	NO.	QTY	NAME
①	1	 Middle Guard	②	1	 Left Brush Guard
③	1	 Right Brush Guard	④	1	 Mounting Bracket (L)
⑤	1	 Mounting Bracket (R)	⑥	1	 Support Bracket (L)

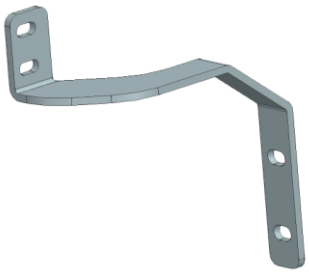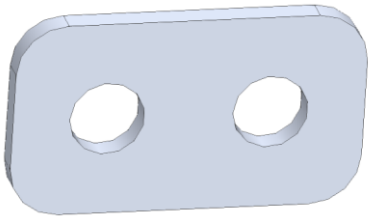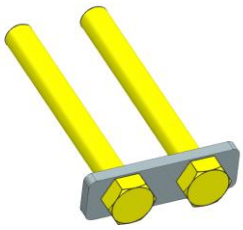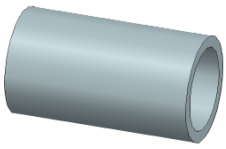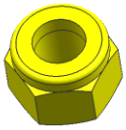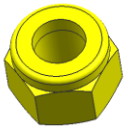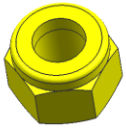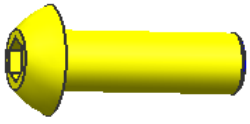⑦	1	 Support Bracket (R)	⑧	4	 Plate Nut
⑨	2	 Double T-Bolts	⑩	4	 Gum cover
⑪	24	 Flat washer D8_22_2	⑫	12	 Flat washer D10_24_2.2
⑬	4	 Flat washer D12_32_3	⑭	4	 Hex Bolt M10_80
⑮	4	 Hex Bolt M10_30	⑯	4	 Hex Bolt M8_30
⑰	4	 Nylon Lock Nut M12	⑱	4	 Nylon Lock Nut M10
⑲	12	 Nylon Lock Nut M8	⑳	8	 Button Head Bolt M8_25
㉑	4	 Lock washer D10	㉒	1	 Allen wrench S=5

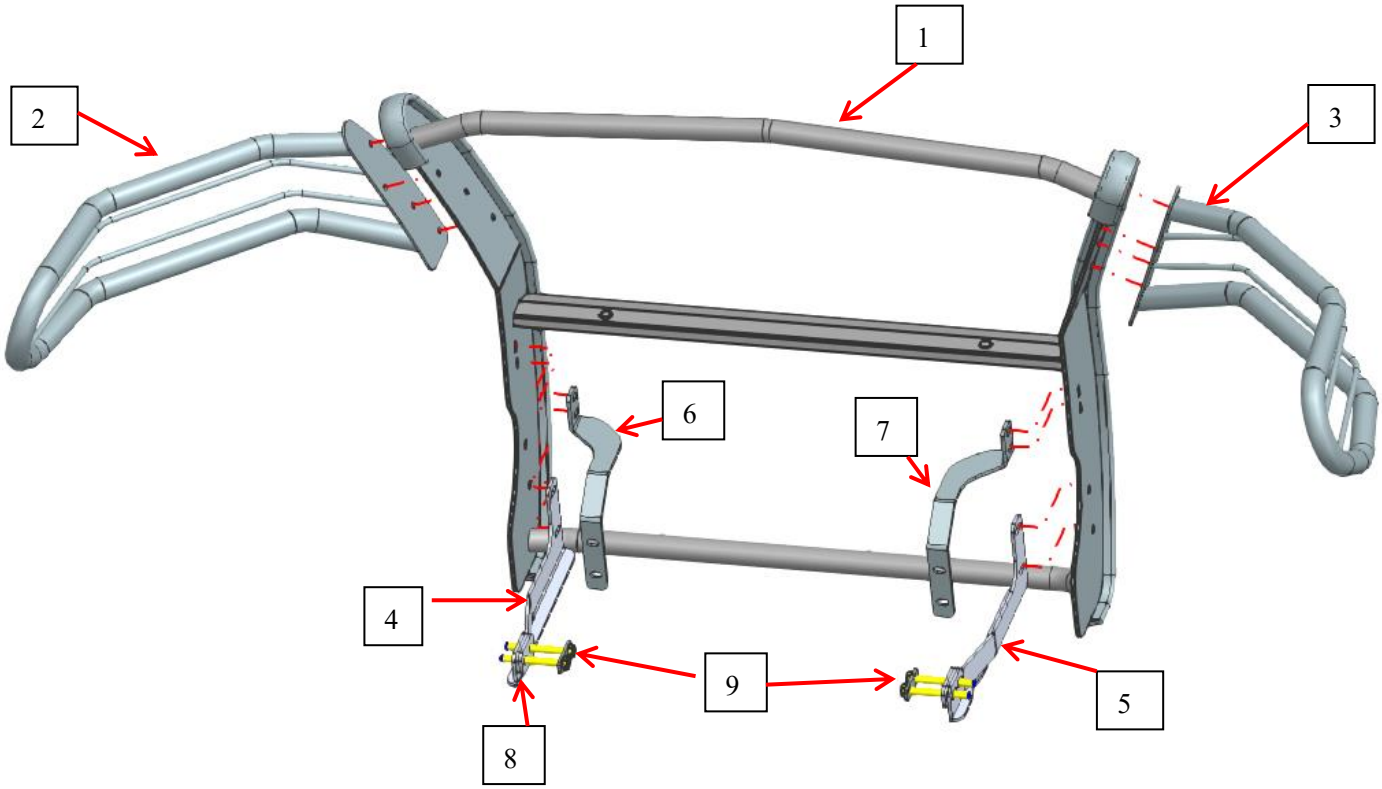
Installation Fig.




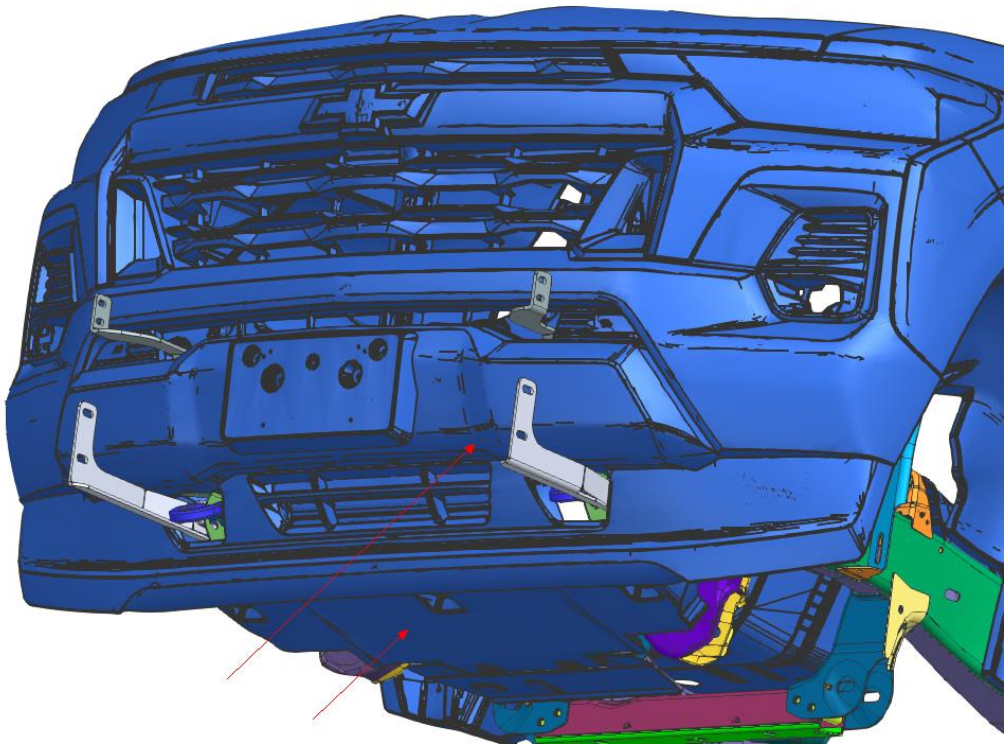Step 1: Check all the contents are available in accordance with the above list.
Remove the front bumper and lower skid plate, then locate the mounting points for mounting brackets and support brackets.




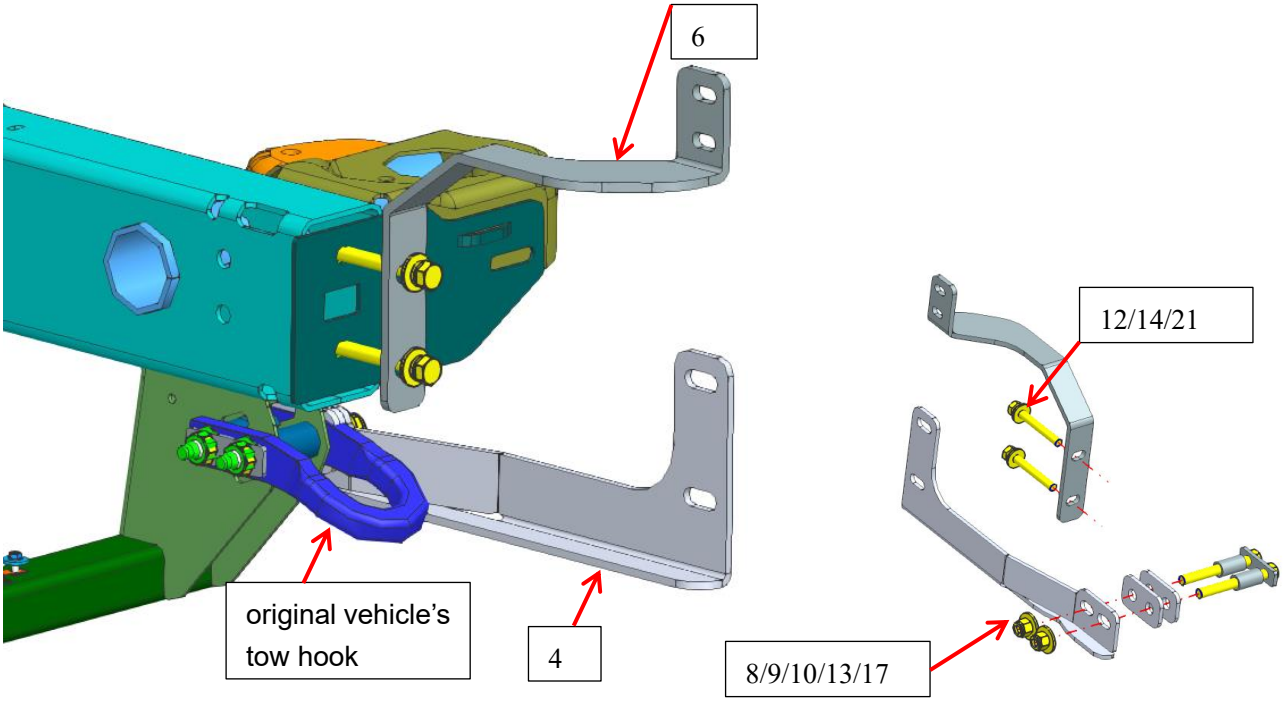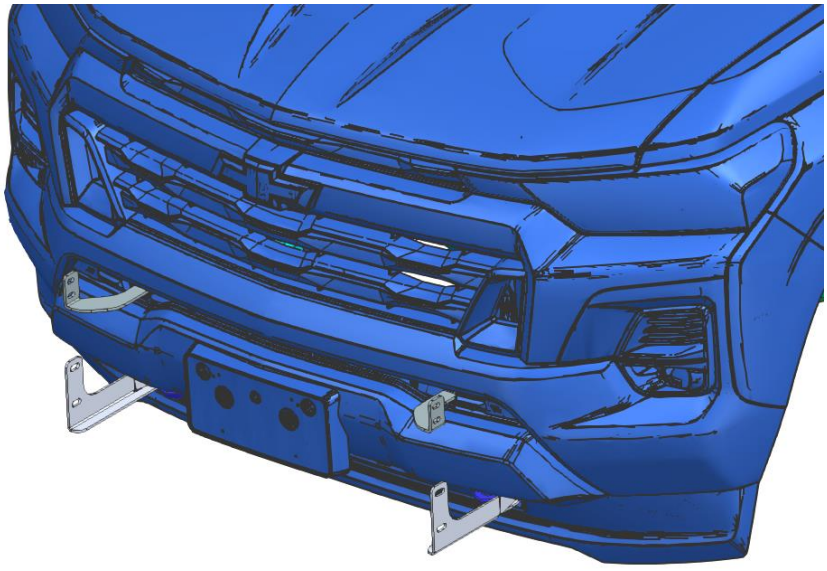Step 2: As shown in the diagram below, install the support bracket (6) to the bumper beam using the corresponding fasteners 12/14/21;
Install the mounting bracket (4) at the tow hook location on the frame, using the plate nut (8) and double T-bolts (M12) (9), a gum cover (10), and the corresponding fasteners 13/17 to secure the assembly; if you need to reinstall the original vehicle's tow hook, replace the plate nut (8) with the original vehicle's tow hook.
Install the support bracket (R) (7) and the mounting bracket (R) (5) symmetrically.






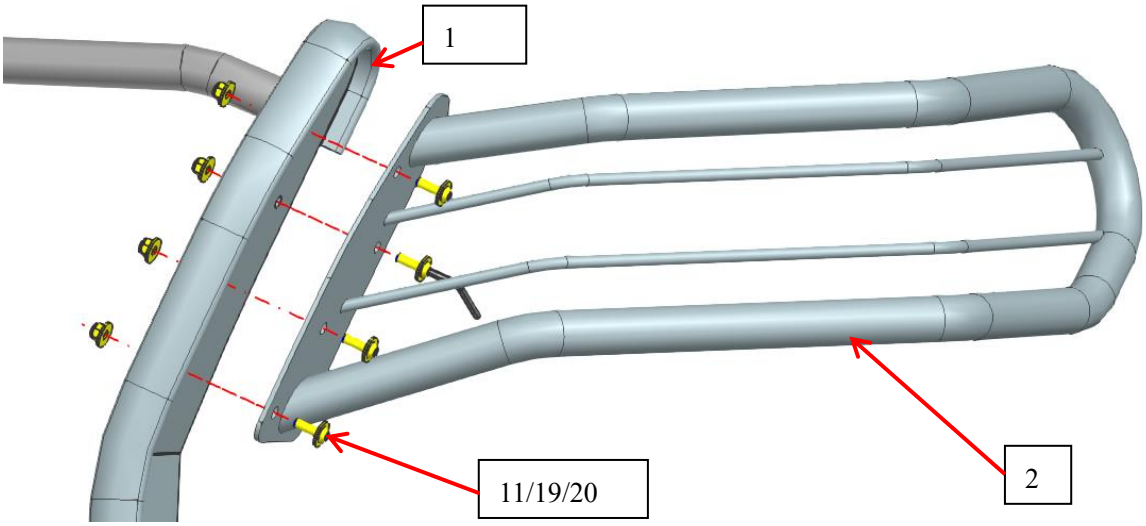
Step 3: Use standard parts 11/19/20 to mount the Left Brush Guard (2) and Right Brush Guard (3) onto the Middle Guard (1). Install them symmetrically on the left and right sides.



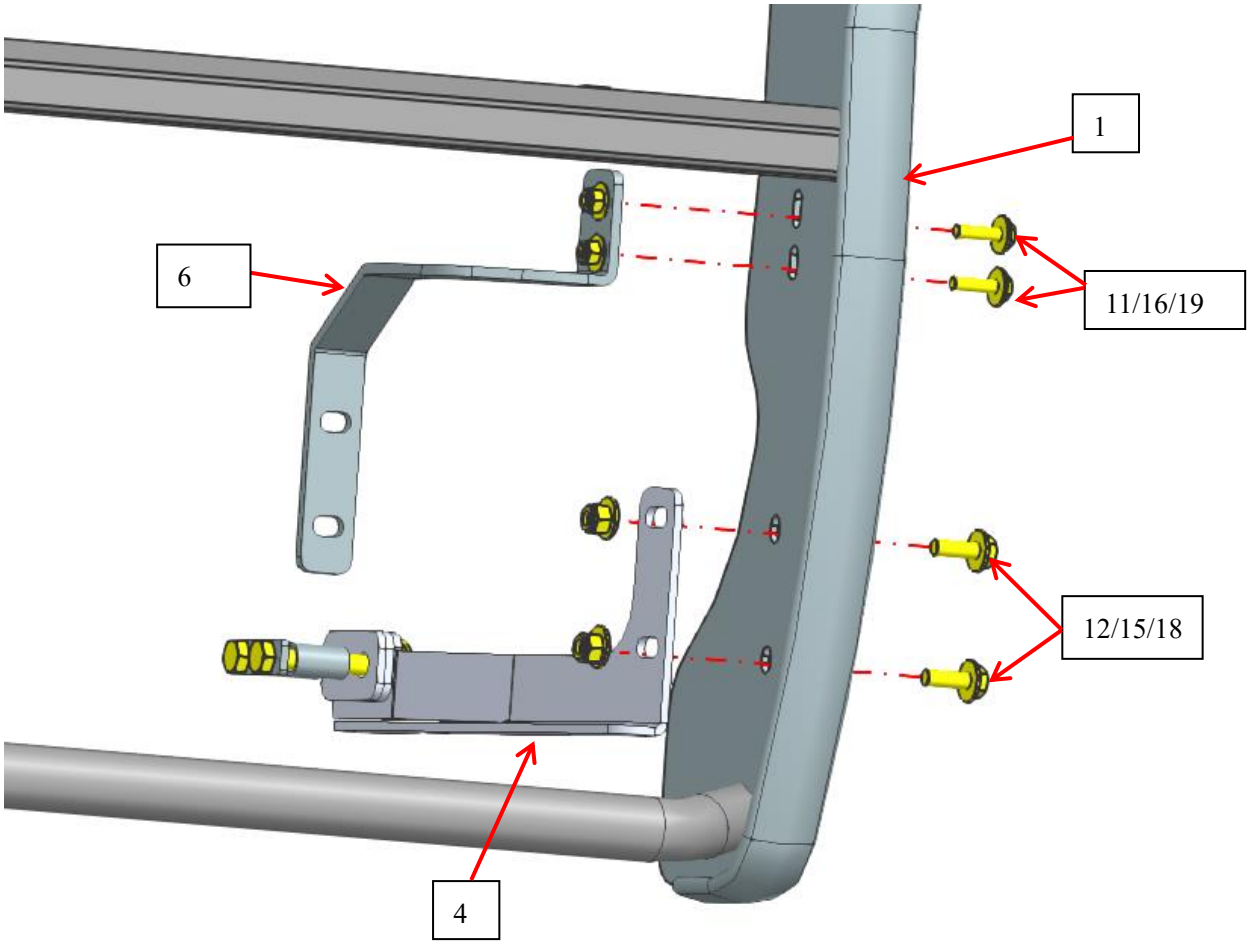Step 4: Use the standard fasteners shown in the figure below to mount the grille guard assembly to the mounting brackets and support brackets. Install them symmetrically on both sides.



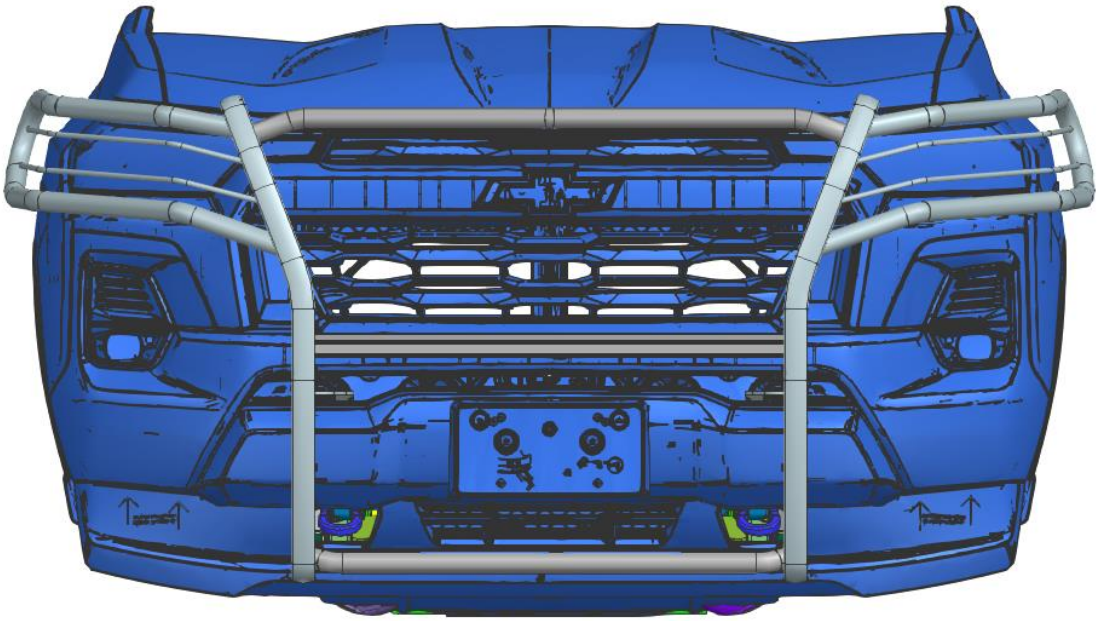Step 5: Complete installation.



NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.