INSTALLATION INSTRUCTIONS

BLACK ATLAS ROLL BAR FOR 2015-2021 Chevrolet Colorado / GMC Canyon

PART # ATRB5BK

IMPORTANT SAFETY DISCLAIMER:

Black Horse Off Road Roll Bars are not designed or intended to withstand a vehicle rollover. They are not rollover protection structures and are not engineered, tested, or certified to protect occupants in the event of a rollover. Installation of this product does not provide or imply any rollover protection.

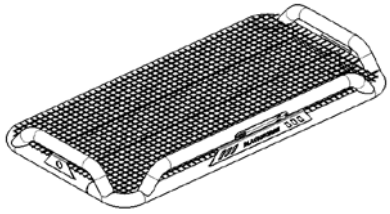
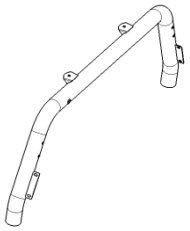
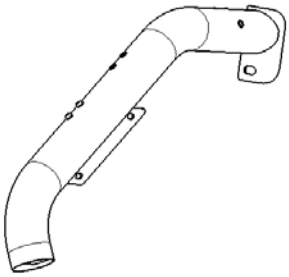
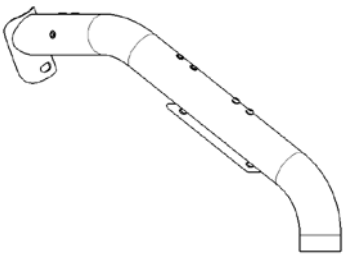
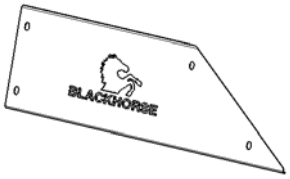
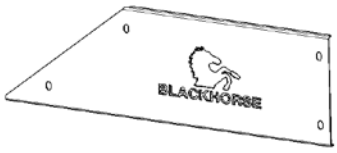
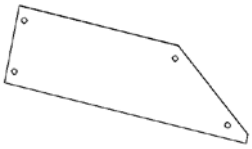
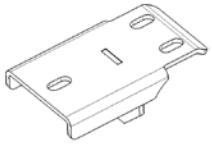
Before Installation

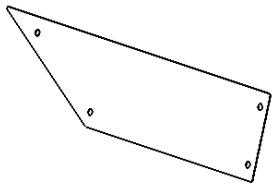
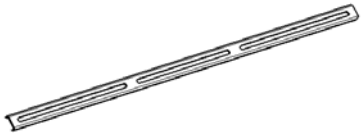
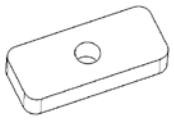
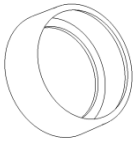


- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly way.

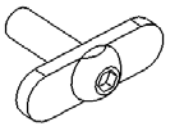





Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

Parts list

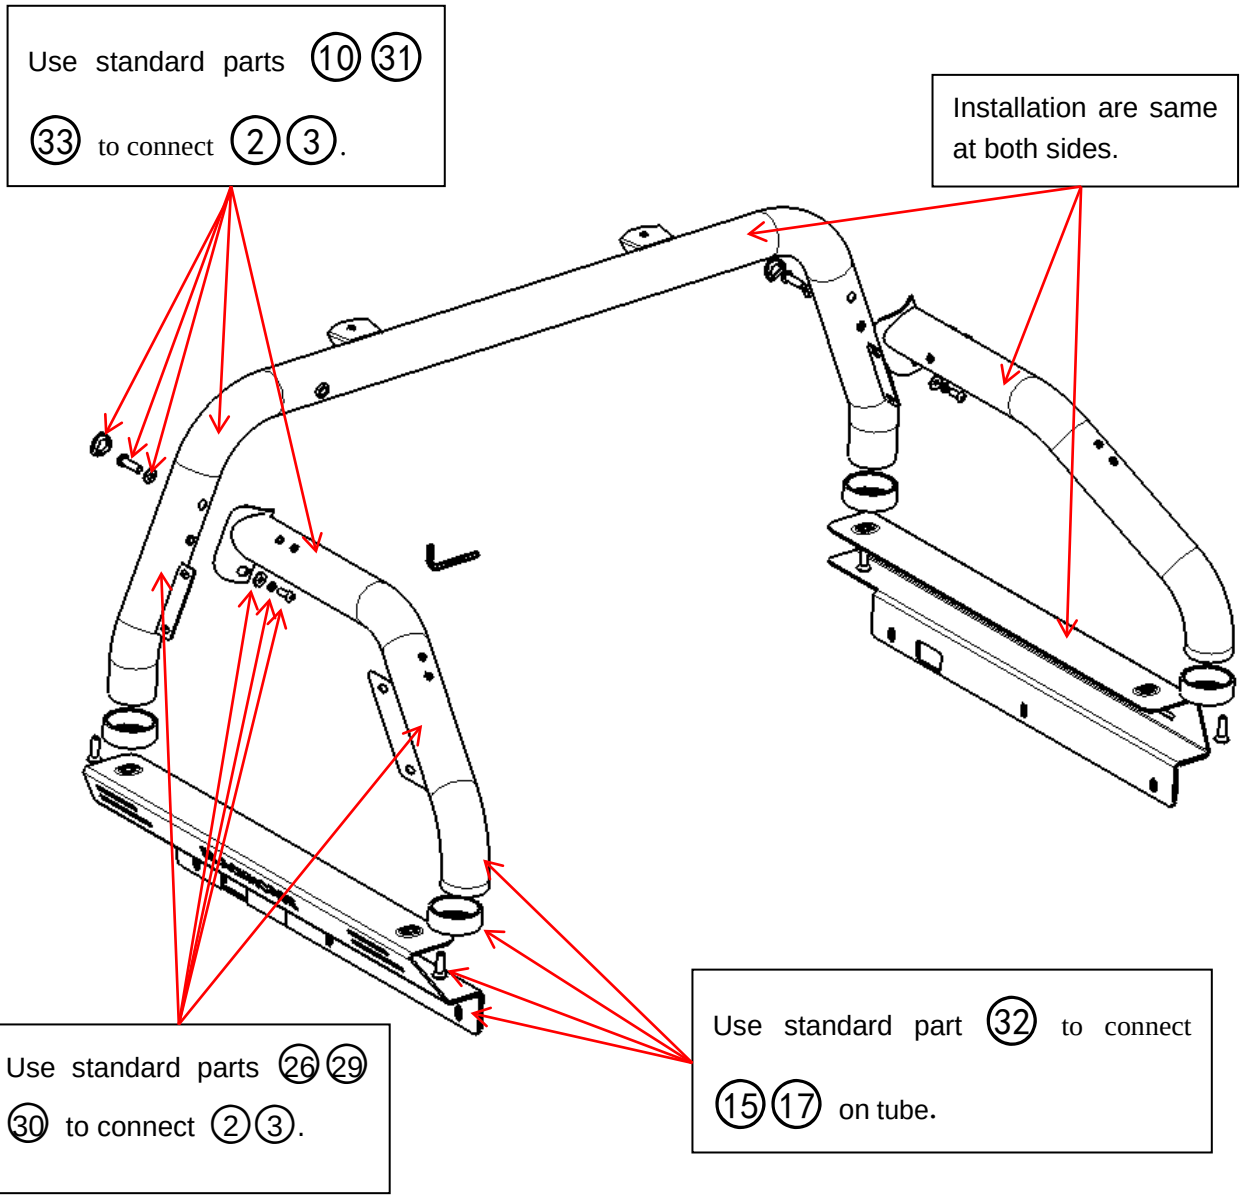
NO.	QTY	NAME	NO.	QTY	NAME
①	1	 Luggage frame (with LED light)	②	1	 Main tube 1
③	1	 Side tube-L	④	1	 Side tube-R
⑤	1	 Decoration plate-L	⑥	1	 Decoration plate-R
⑦	2	 Red decoration plate	⑧	2	 Connect bracket 1

⑨	2	 Decoration plate backboard	⑩	2	 Rubber plug
⑪	1	 Connect bracket 2-L	⑫	1	 Connect bracket 2-R
⑬	1	 Connecting plate	⑭	2	 Block
⑮	1	 L-bracket	⑯	1	 R-bracket
⑰	4	 Gum cover	⑱	8	 Flat washer D6
⑲	8	 Button head allen bolts M6_20	⑳	8	 Hex nut M6
㉑	2	 Button head allen bolts M8*30	㉒	8	 Flat washer D8
㉓	14	 Hex bolt M8*25	㉔	6	 Hex nut M8
㉕	2	 Spring washer D8	㉖	8	 Flat washer D10

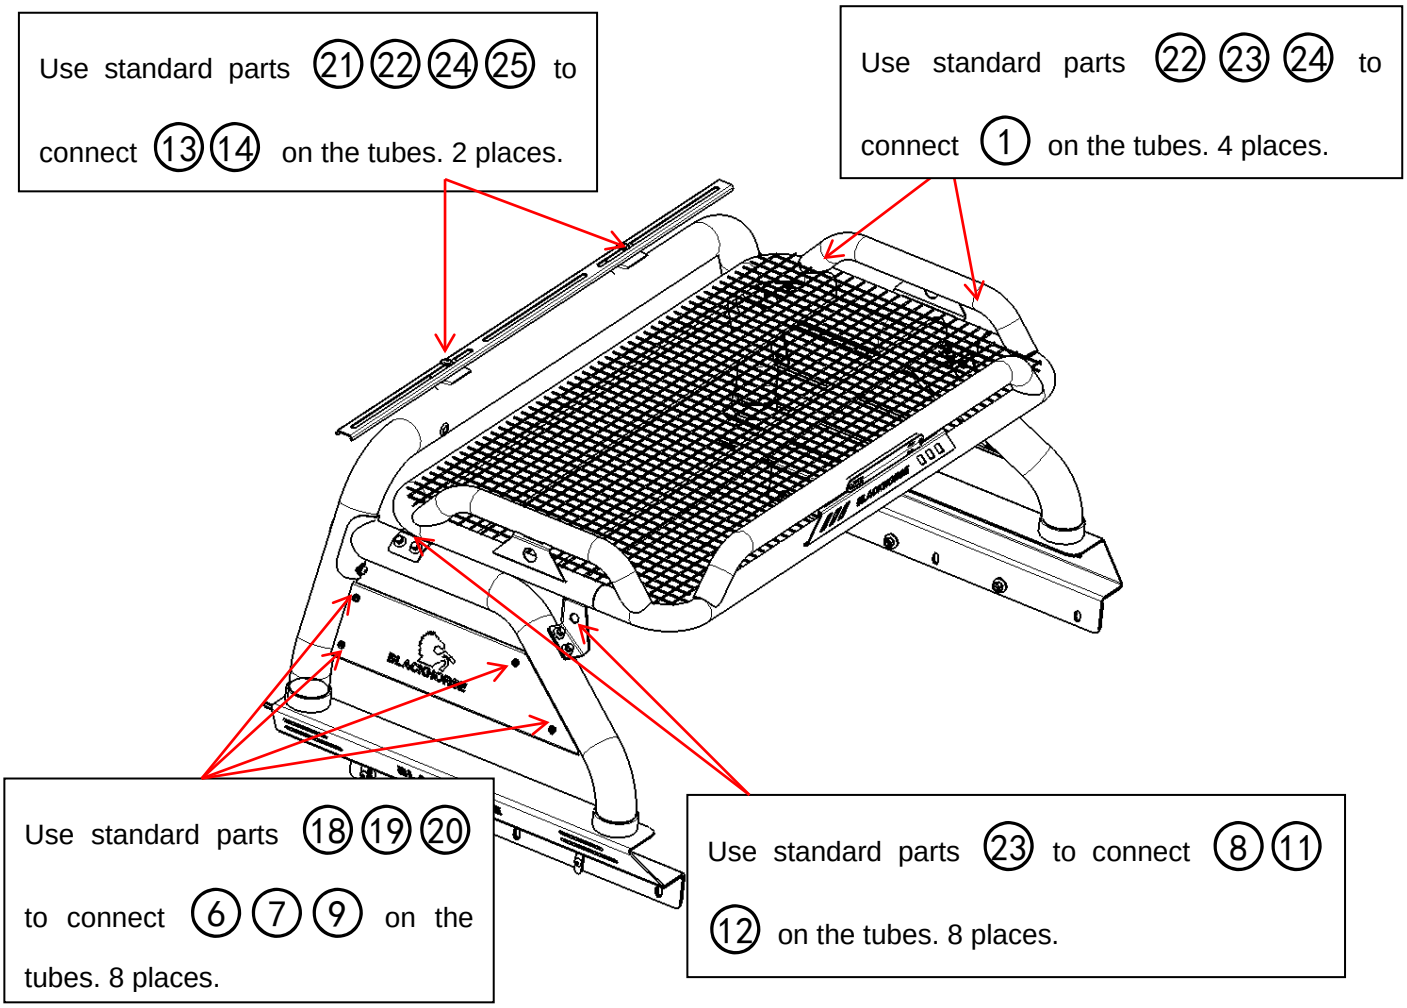
㉗	6	 T-Hex nut M10_35	㉘	6	 Hex nut M10
㉙	8	 Spring washer D10	㉚	2	 Hex nut M10_25
㉛	2	 Button head allen bolts M12_40	㉜	4	 Flat head allen bolts M12_40
㉝	2	 Flat washer D12	㉞	1	 Allen wrench S=8
㉟	1	 Allen wrench S=4	㊱	1	 Allen wrench S=5
㊲	6	 PVC	㊳	5	 Black adhesive tape

Installation Steps

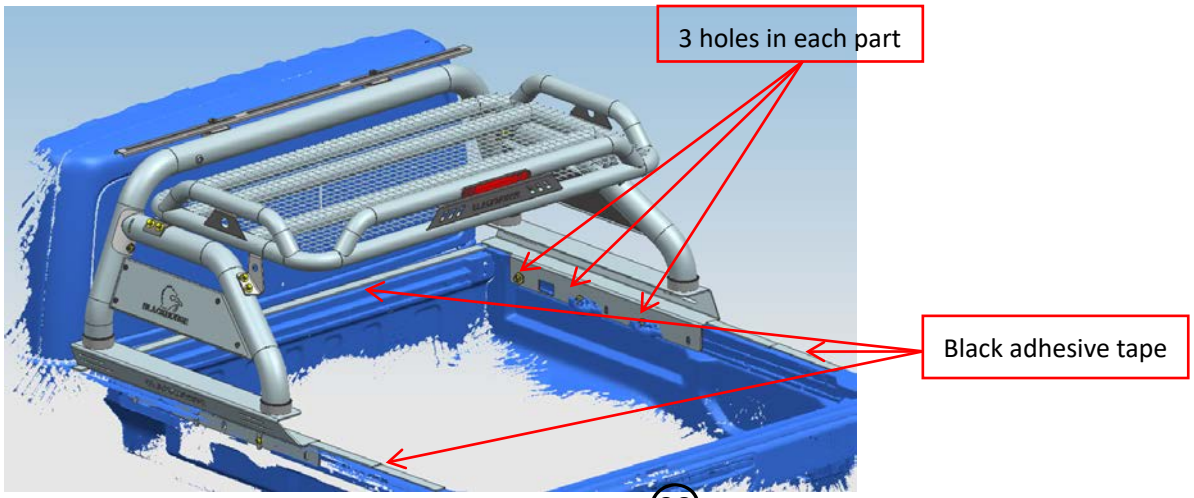
Step1: Assemble tubes with standard parts. Lock all the standard parts after adjust the position.



Step2: Assemble Luggage frame and tubes with standard parts. Lock all the standard parts after adjust the position.



Step3: Put roll bar on the truck in an appropriate place. And use pen to mark the holes. 3 places in each part, 6 places total. Remove the roll bar then drill the size of Φ12 holes. Put the roll bar back and use standard ㉖㉗ ㉘㉙ ㊲to fasten.



Notice: If compatible with tonneau cover, pls sticker the black adhesive tape ㊳ on the truck rail to full fill the gap as the picture shown.

NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.