INSTALLATION INSTRUCTIONS

ATLAS ROLL BAR TONNEAU COVER BASE FOR 19-20 FORD RANGER

PART # ATRB8BK - ATRB8SS

IMPORTANT SAFETY DISCLAIMER:

Black Horse Off Road Roll Bars are not designed or intended to withstand a vehicle rollover. They are not rollover protection structures and are not engineered, tested, or certified to protect occupants in the event of a rollover. Installation of this product does not provide or imply any rollover protection.

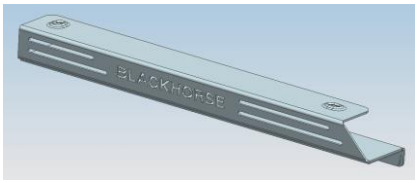
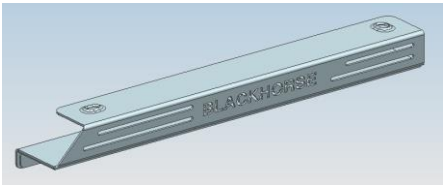
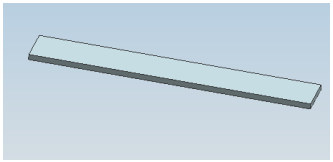
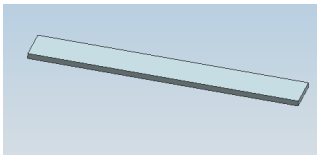
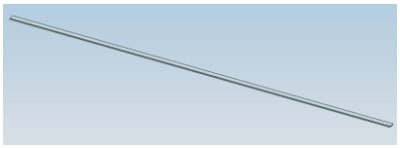
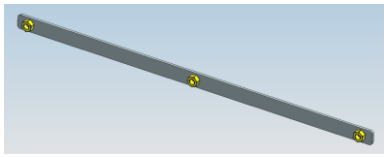
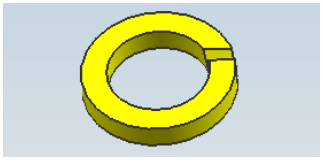
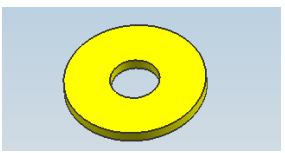
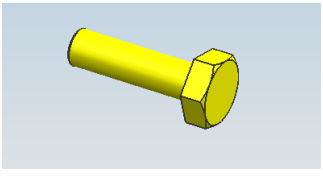
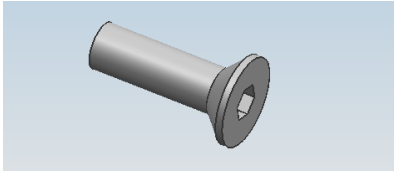
Before Installation

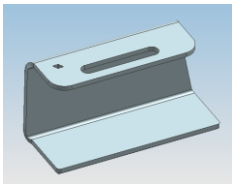
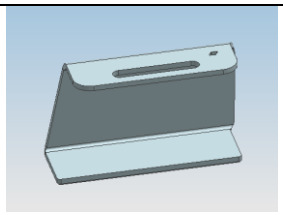
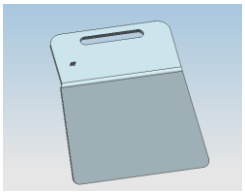
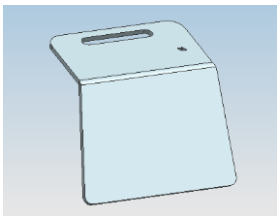
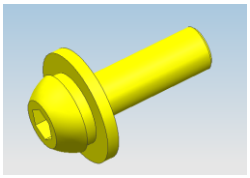
- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly way.

Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

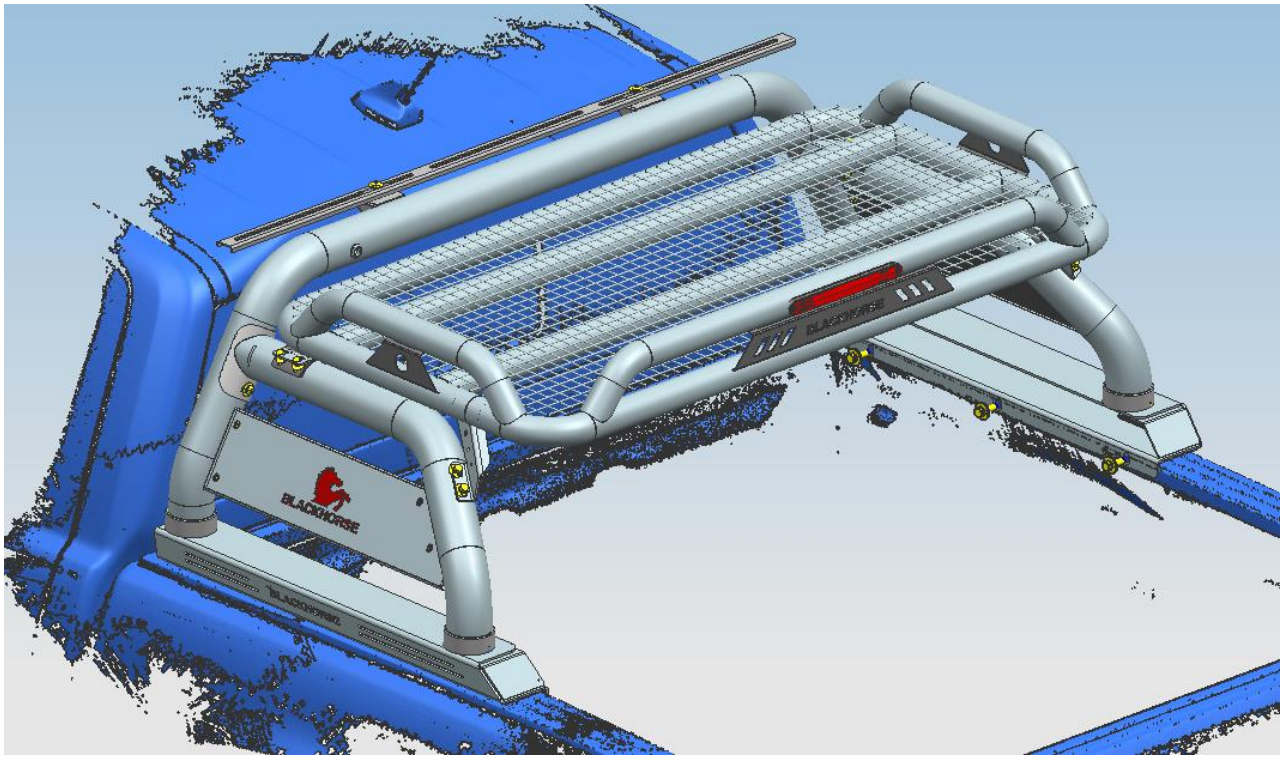
Parts list

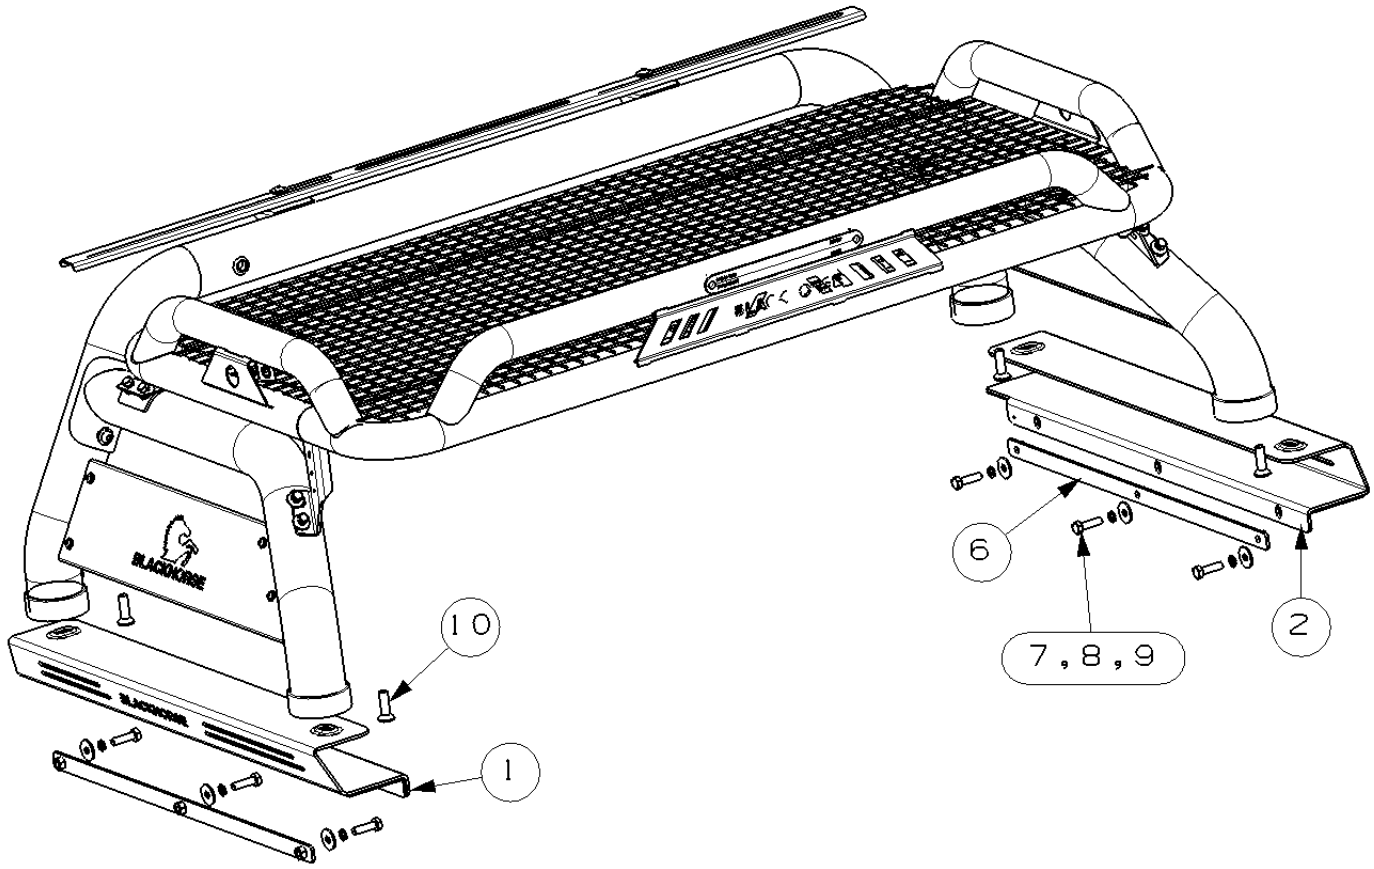
NO.	QTY	NAME	NO.	QTY	NAME
①	1	 Support bracket L	②	1	 Support bracket R
③	4	 Black adhesive tape 4	④	4	 Black adhesive tape 5
⑤	1	 Black adhesive tape 6	⑥	2	 Connecting plate
⑦	6	 Spring washer D10	⑧	6	 Flat washer D10
⑨	6	 Hex bolt M10_35	⑩	4	 Flat head allen bolt M12_40

1	1	 Wrench S=8	2	1	 Front end cover (L)
3	1	 Front end cover (R)	4	1	 Rear end cover (L)
5	1	 Rear end cover (R)	6	1	 Wrench S=4
7	4	 Button head allen bolts M6_20			

Installation Steps

Installation figure:



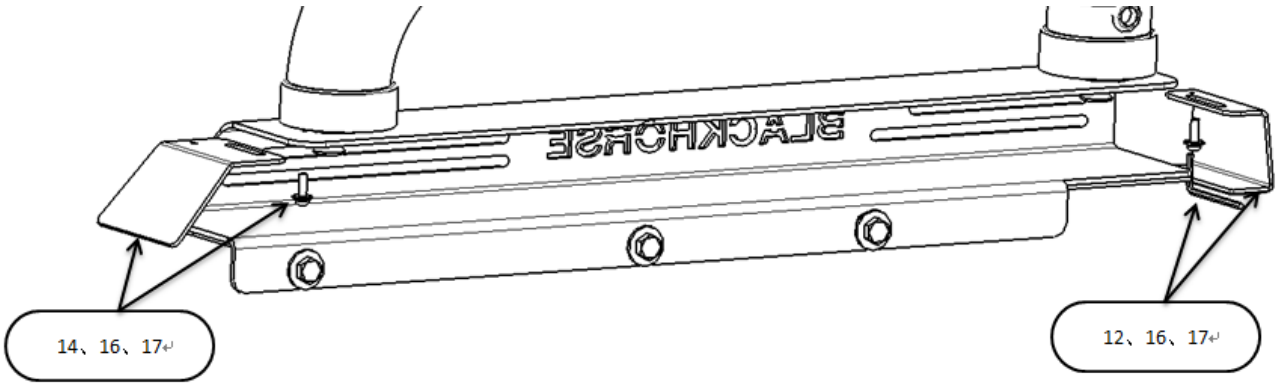


Step 1: Check all the contents are available in accordance with the above list.

Step 2: Install support bracket① ② on connecting plate⑥. Pre-tighten the standard parts⑦⑧⑨.

Step 3: Install roll bar on support bracket. Pre-tighten the standard part⑩.

Step 4: Install left side of Front and Rear end cover⑫⑭ on the support bracket (bilateral symmetry). Pre-tighten the standard parts⑯⑰.



Step 5: Adjust as required then fully tighten all standard parts.

NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.