



TEL: 1-866-XANATOS


INSTALLATION INSTRUCTIONS

**LADDER RACK FOR VANS WITHOUT GUTTER
2014+ CITY EXPRESS, 2015+ RAM PROMASTER CITY,
2016+ METRIS, 2010+ NV200, 2012+ NV,
2002+ TRANSIT CONNECT, 2013+ TRANSIT
PART# TR-NRG01**

LADDER RACK FOR VANS WITHOUT GUTTER
2014+ CITY EXPRESS, 2015+ RAM PROMASTER CITY, 2016+ METRIS
2010+ NV200, 2012+ NV, 2002+ TRANSIT CONNECT, 2013+ TRANSIT

PARTS LIST:

2	Cross Members	9	10mm Nylon Lock Nuts
1	Wind Deflector	8	8mm U-Clips
2	Ladder Brackets	4	8mm x 30mm Hex Bolts
4	Roof Brackets	8	8mm x 20mm Hex Bolts
4	Tube Spacers	4	8mm x 24mm x 2mm Flat Washers
4	120mm x 33mm x 6mm Rubber Spacers	8	8mm x 16mm x 1.6mm Flat Washers
4	128mm x 51mm x 5mm Plates	8	8mm Lock Washers
4	125mm x 51mm x 3mm Rubber Pads	4	8mm Nylon Lock Nuts
4	8mm x 45mm x 3mm Rubber Washers	8	6mm x 20mm Hex Bolts
4	10mm x 70mm Hex Bolts	8	6mm x 12mm x 1.6mm Flat Washers
5	10mm x 25mm Hex Bolts	8	6mm Lock Washers
18	10mm x 20mm x 2mm Flat Washers		

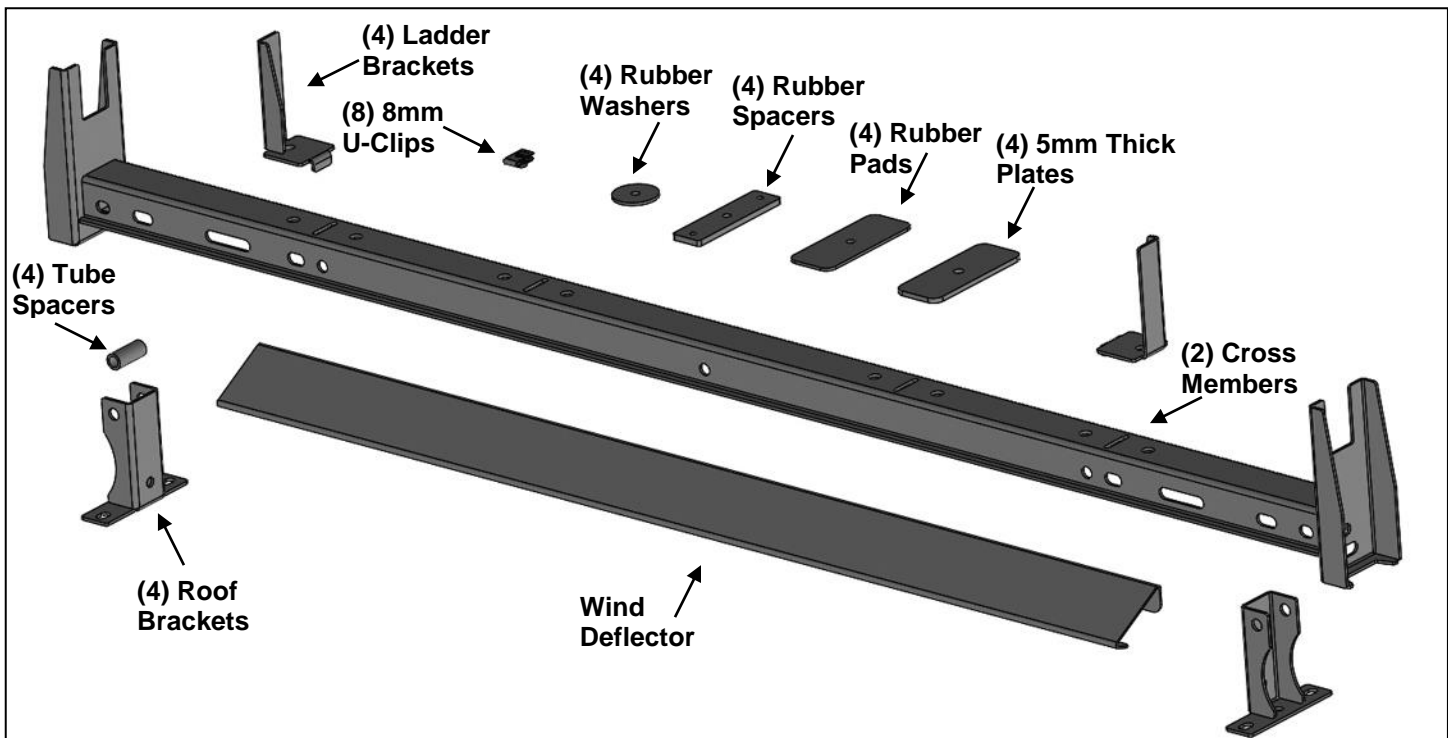

PROCEDURE:

- 1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS AND WARNING ON PAGE 3 CAREFULLY BEFORE STARTING INSTALLATION. ASSISTANCE IS RECOMMENDED.**
- Select (1) Cross Member and the Wind Deflector. Align the (3) slots on the Wind Deflector with the (2) inner slots and (1) center hole on the front face of the Cross Member, **(Figure 1)**. Use the provided (3) 10mm x 25mm Hex Bolts, (6) 10mm x 20mm Flat Washers and (3) 10mm Nylon Lock Nuts to attach the Wind Deflector to the Cross Member, **(Figure 2)**.
- Next, select (1) Ladder Bracket. Slide the tab on the Bracket into the rectangular opening on the top face of the Cross Member. Use (1) 10mm x 25mm Hex Bolt, (2) 10mm x 20mm Flat Washers and (1) 10mm Nylon Lock Nut to attach the Bracket to the top of the Cross Member, **(Figure 3)**. Repeat this Step to attach (1) Ladder Bracket on the other side of the Cross Member.
- Select (1) Roof Bracket and (1) Tube Spacer. Depending on make and model of vehicle, determine the correct mounting slots for the Roof Bracket on the Cross Member, **(Figure 4)**. Slide and align the Tube Spacer into the Roof Bracket. Next, slide the assembly into the bottom of the Cross Member and align

LADDER RACK FOR VANS WITHOUT GUTTER
2014+ CITY EXPRESS, 2015+ RAM PROMASTER CITY, 2016+ METRIS
2010+ NV200, 2012+ NV, 2002+ TRANSIT CONNECT, 2013+ TRANSIT

with the appropriate slots. Use (1) 10mm x 70mm Hex Bolt, (2) 10mm x 20mm Flat Washers and (1) 10mm Nylon Lock Nut to secure the Roof Bracket and Tube Spacer to the Cross Member, **(Figure 5)**.

NOTE: When installed properly, the open end on the Roof Bracket will face outward. Repeat this Step to install (1) Roof Bracket on the other side of the Cross Member.

5. Repeat **Step 4** to attach the remaining (2) Roof Brackets on the other Cross Member.
6. Determine the desired mounting location on the roof of the vehicle and remove any plastic plugs, if equipped, **(Figures 6 & 7)**. With assistance, place the Cross Member assemblies onto the desired mounting location on the vehicle. **Depending on the make and model of the vehicle**, determine the correct procedure to install the Cross Member assemblies onto the roof of the vehicle:

Promaster City

- a. Place and align (1) Rubber Spacer between the bottom of the Roof Bracket and the threaded inserts on the roof.
- b. Use (2) 6mm x 20mm Hex Bolts, (2) 6mm Lock Washers and (2) 6mm Flat Washers to attach the Roof Bracket to the top of the roof, **(Figure 8)**.
- c. Repeat the above Steps for the remaining (3) mounting locations on the roof.

Transit Connect

- a. Place and align (1) Rubber Spacer between the bottom of the Roof Bracket and the mounting hole on the roof.
- b. Insert (1) 8mm x 30mm Hex Bolt and (1) 8mm x 16mm Flat Washer in through the center hole on the Roof Bracket, Rubber Spacer and through the mounting hole on the roof. From the inside of the roof use the provided (1) Rubber Washer, (1) 8mm x 24mm Flat Washer and (1) 8mm Nylon Lock Nut to secure the Roof Bracket to the roof, **(Figure 9)**.
- c. Repeat the above Steps for the remaining (3) mounting locations on the roof.

NV200 & City Express

- a. Place and align (1) Rubber Washer between the bottom of the Roof Bracket and the threaded insert on the roof.
- b. Use (1) 8mm x 30mm Hex Bolt, (1) 8mm Lock Washer and (1) 8mm x 16mm Flat Washer to secure the Roof Bracket to the roof, **(Figure 10)**.
- d. Repeat the above Steps for the remaining (3) mounting locations on the roof.

Metris

- a. Place and align (1) Rubber Spacer between the bottom of the Roof Bracket and the threaded inserts on the roof.
- b. Use (2) 6mm x 20mm Hex Bolts, (2) 6mm Lock Washers and (2) 6mm Flat Washers to secure the Roof Bracket to the roof, **(Figure 11)**.
- c. Repeat the above Steps for the remaining (3) mounting locations on the roof.

Transit

- a. Place and align (1) 128mm x 51mm x 5mm Plate with (1) Rubber Pad in between the bottom of the Roof Bracket and the threaded insert on the roof.
- b. Use (1) 8mm x 30mm Hex Bolt, (1) 8mm Lock Washer and (1) 8mm x 16mm Flat Washer to attach the Roof Bracket to the roof, **(Figure 12)**.
- c. Repeat the above Steps for the remaining (3) mounting locations on the roof.

NV

- a. Slide (2) 8mm Clip Nuts onto the mounting plates on the side of the roof with the nut towards the bottom. Line up the threaded nut on the clip with the hole on the mounting plate.
 - b. Use (2) 8mm x 20mm Hex Bolts, (2) 8mm Lock Washers and (2) 8mm x 16mm Flat Washers to attach the Roof Bracket to the roof, **(Figure 13)**.
 - c. Repeat the above Steps for the remaining (3) mounting locations on the roof.
7. Level and center the Cross Member assemblies to the vehicle and tighten all hardware at this time.
 8. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

To protect your investment, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish. Mild soap may be used to clean the Ladder Rack.

LADDER RACK FOR VANS WITHOUT GUTTER

**2014+ CITY EXPRESS, 2015+ RAM PROMASTER CITY, 2016+ METRIS
2010+ NV200, 2012+ NV, 2002+ TRANSIT CONNECT, 2013+ TRANSIT**





Read and understand all WARNINGS and INSTRUCTIONS before assembly and installation.

Ladder Rack has a maximum static load capacity of 600lbs. when properly installed and the load distributed evenly between two complete units. Load capacity is greatly affected by the design, strength and capacity of the intended vehicle and must be determined by installer/user.


Ladders must be secured per ANSI standard A14.2-1990 paragraph 8.4.4.

This product is primarily intended for transporting ladders. It can be used for transporting lumber, pipe and other similar materials when properly tied down and not exceeding capacity of the ladder rack or more importantly, the vehicle. It is the responsibility of the user of this rack to safely secure these materials to the rack before transporting. Any modifications made to this product for any other purpose other than its intended use could create a hazardous condition that can cause serious personal injury or property damage.


Any modification or unintended use of this product shall immediately void all manufacturer's warranties. Manufacturer disclaims all liability for injuries to persons or property resulting from any modification to or unintended use of this product.

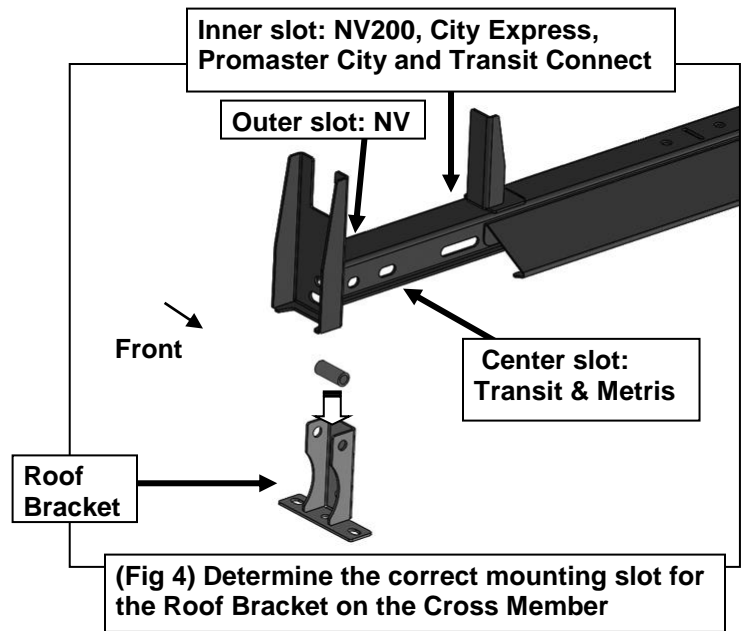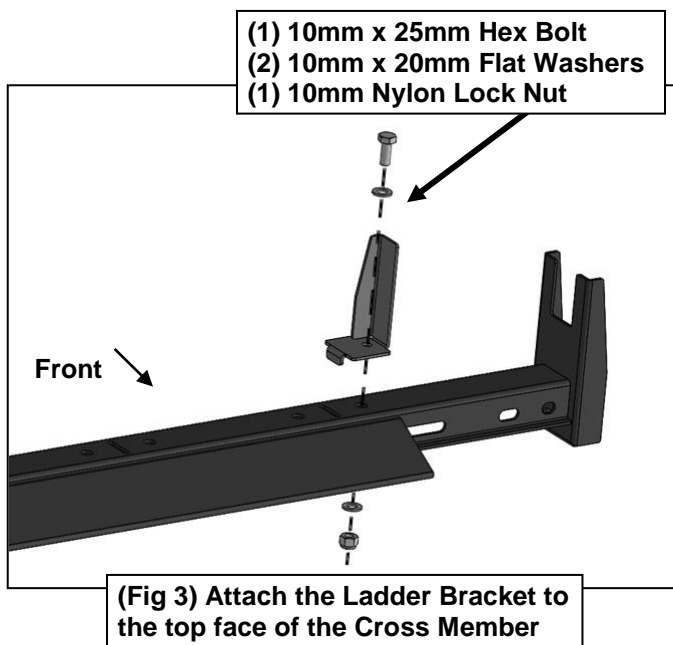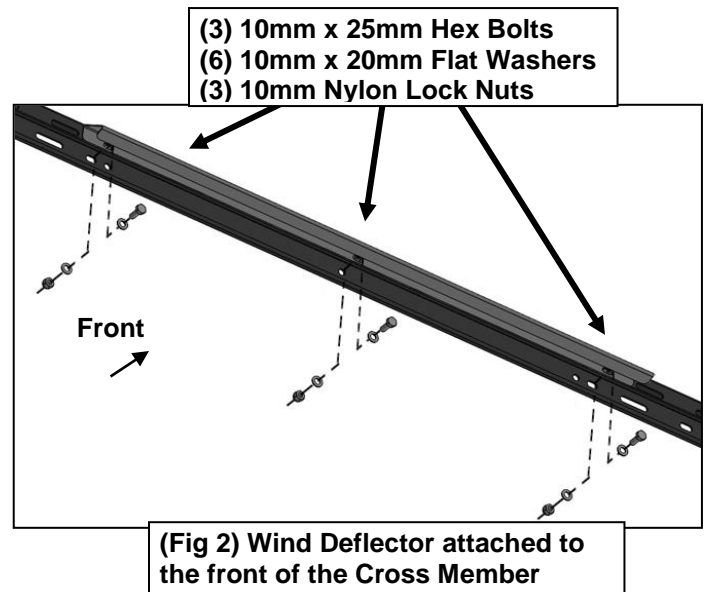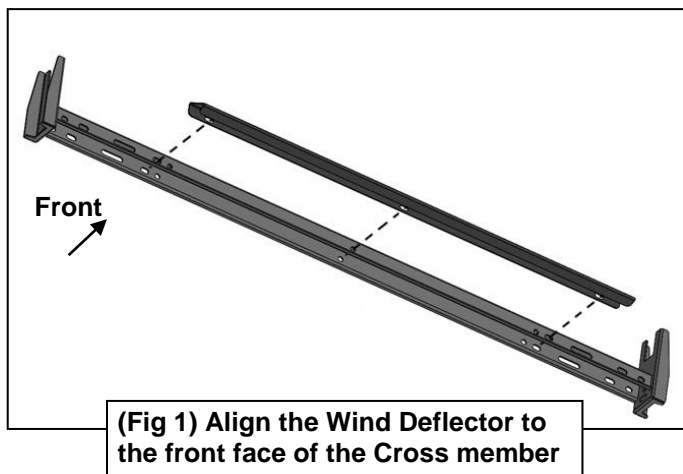


LADDER RACK FOR VANS WITHOUT GUTTER
2014+ CITY EXPRESS, 2015+ RAM PROMASTER CITY, 2016+ METRIS
2010+ NV200, 2012+ NV, 2002+ TRANSIT CONNECT, 2013+ TRANSIT

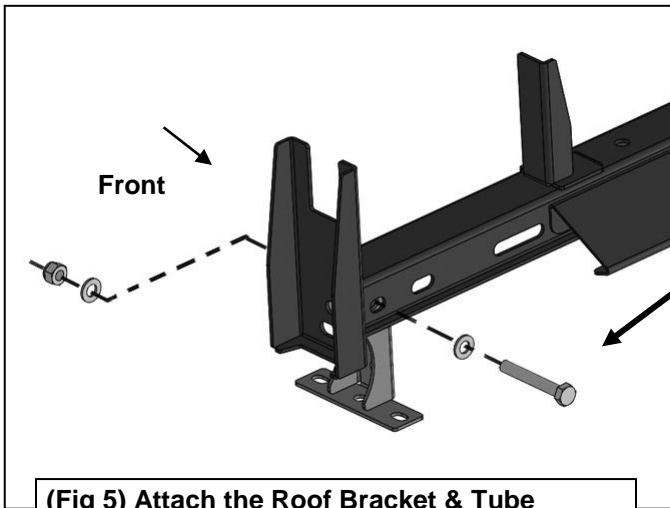


(Fig 5) Attach the Roof Bracket & Tube Spacer to the bottom of the Cross Member

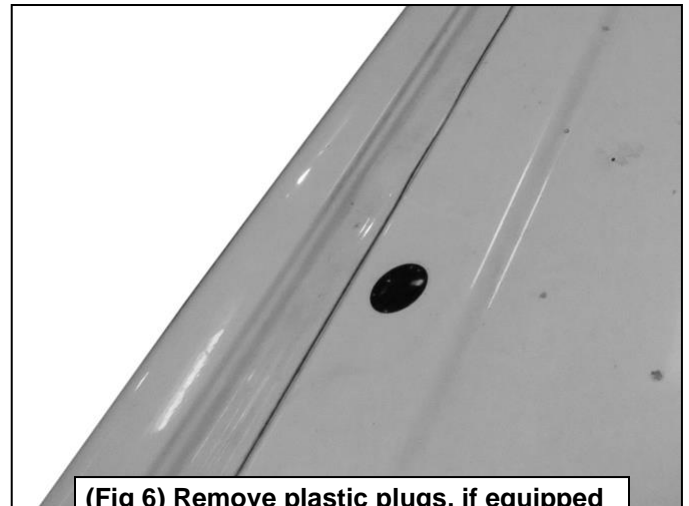


(Fig 6) Remove plastic plugs, if equipped

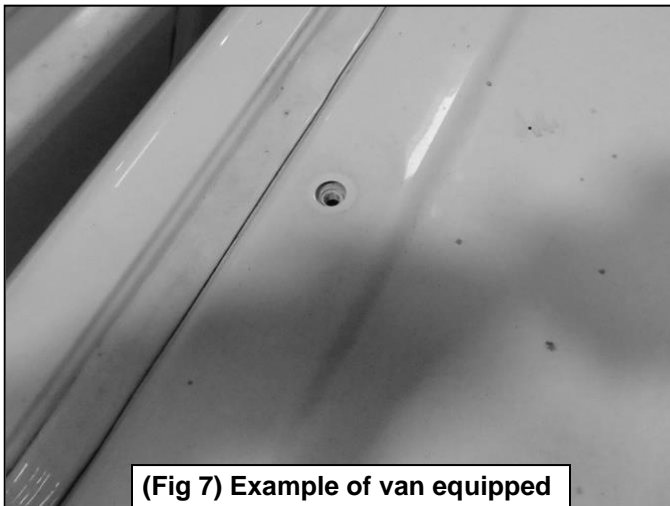

(Fig 7) Example of van equipped with threaded insert

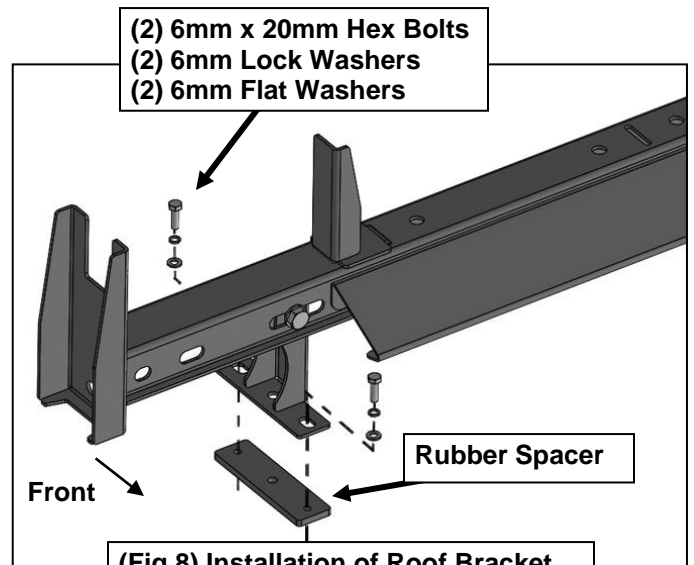


(Fig 8) Installation of Roof Bracket to roof for Promaster City illustrated

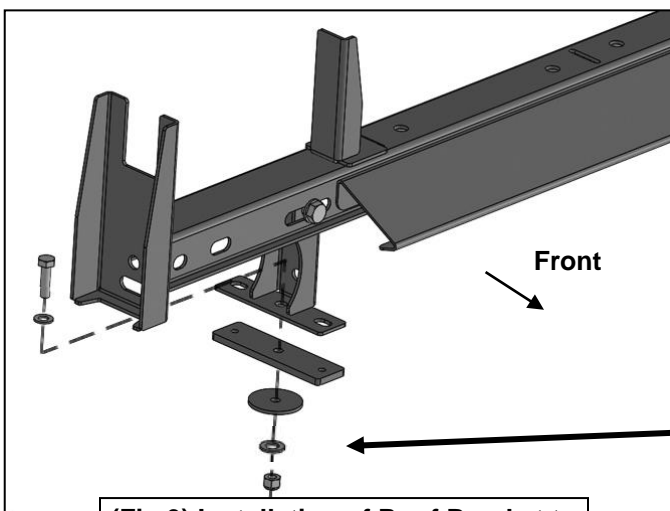

(Fig 9) Installation of Roof Bracket to roof for Transit Connect illustrated


LADDER RACK FOR VANS WITHOUT GUTTER
2014+ CITY EXPRESS, 2015+ RAM PROMASTER CITY, 2016+ METRIS
2010+ NV200, 2012+ NV, 2002+ TRANSIT CONNECT, 2013+ TRANSIT

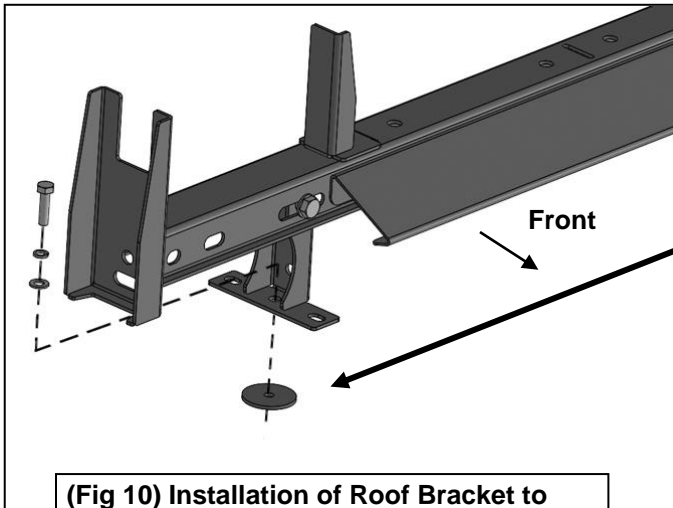


(Fig 10) Installation of Roof Bracket to roof for NV200 & City Express illustrated

- (1) 8mm x 30mm Hex Bolt
- (1) 8mm Lock Washer
- (1) 8mm x 16mm Flat Washer
- (1) Rubber Washer

- (2) 6mm x 20mm Hex Bolts
- (2) 6mm Lock Washers
- (2) 6mm Flat Washers
- (1) Rubber Spacer

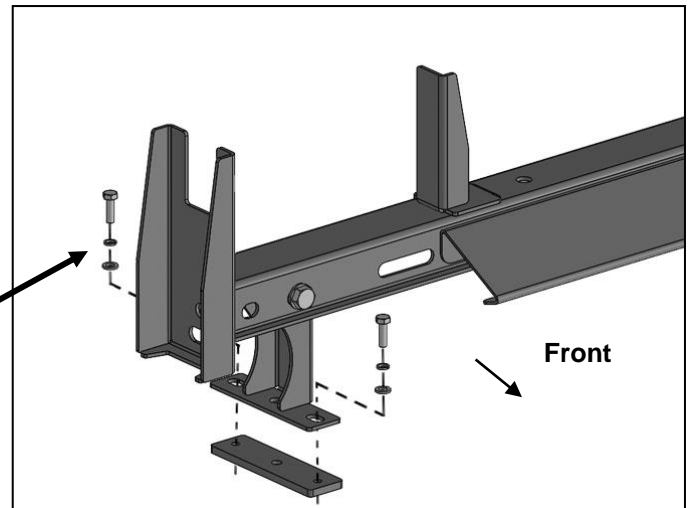


(Fig 11) Installation of Roof Bracket to roof for Metris illustrated

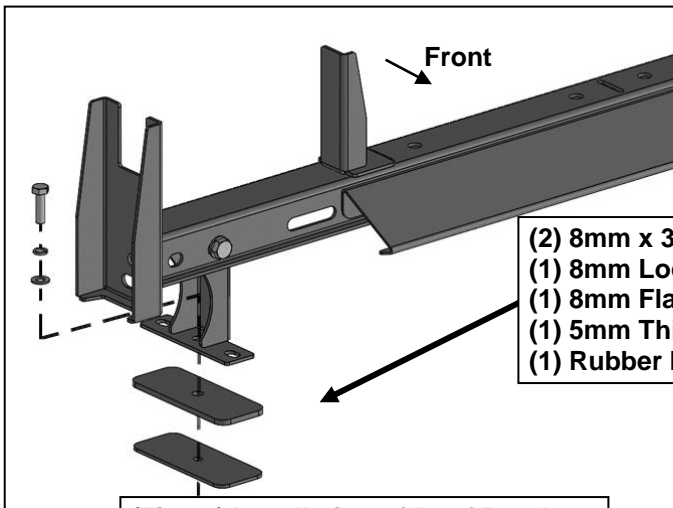

(Fig 12) Installation of Roof Bracket to roof for Transit illustrated

- (2) 8mm x 30mm Hex Bolt
- (1) 8mm Lock Washer
- (1) 8mm Flat Washer
- (1) 5mm Thick Plate
- (1) Rubber Pad

- (2) 8mm x 20mm Hex Bolts
- (2) 8mm Lock Washers
- (2) 8mm Flat Washers
- (2) 8mm U-Clips

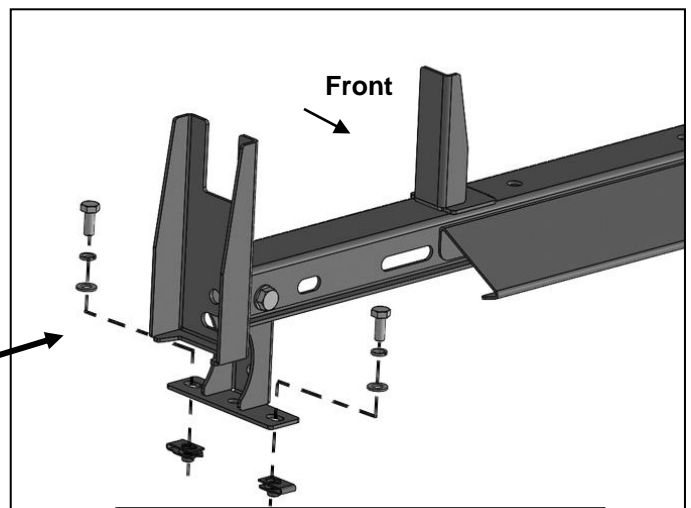

(Fig 13) Installation of Roof Bracket to roof for NV illustrated