



**BLACK HORSE
OFF ROAD®**


TEL: 1-866-XANATOS

INSTALLATION INSTRUCTIONS

**REAR INNER FENDER
20-24 JEEP GLADIATOR
PART#INFG20**

PARTS LIST:

1	Driver/Left Fender Liner	6	6mm Clip Nuts
1	Passenger/Right Fender Liner	1	4mm Hex Wrench
18	6-1.0mm x 20mm Button Head Combo Bolts		

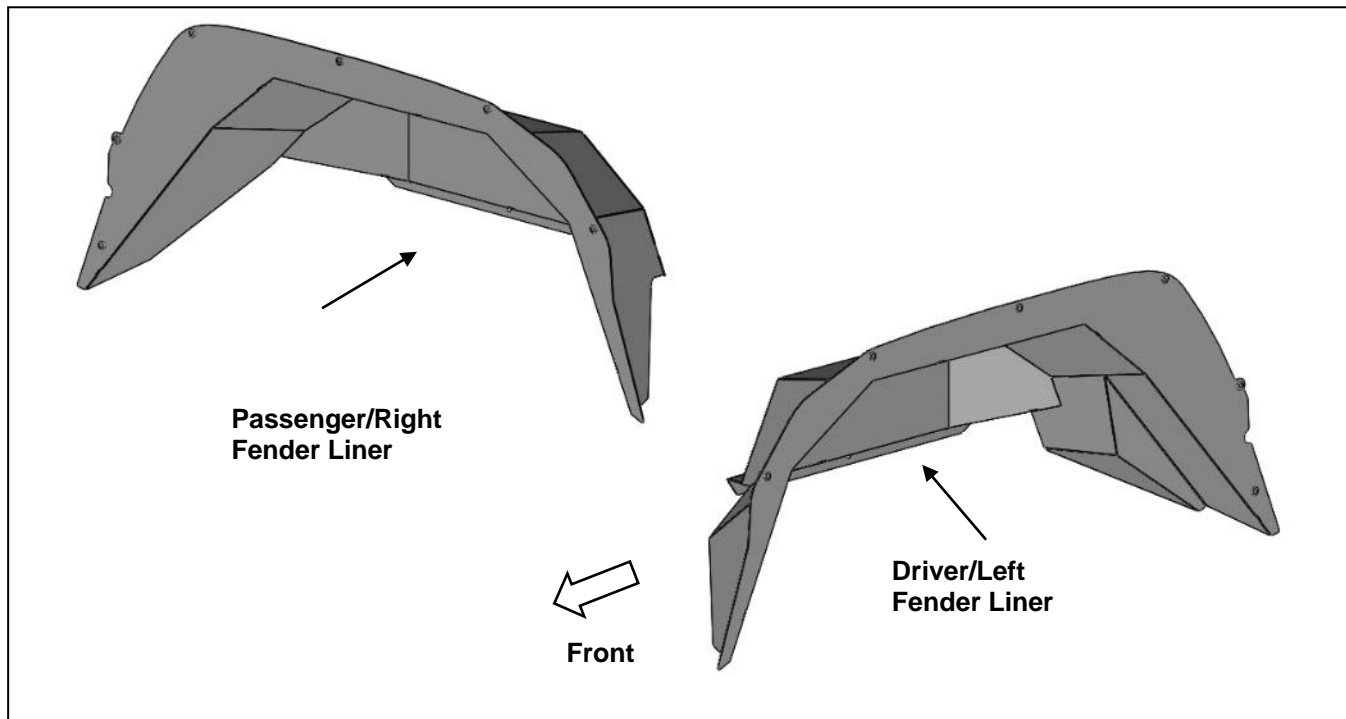

PROCEDURE:

REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY. ASSISTANCE IS RECOMMENDED.


1. Start installation in the Driver/Left wheel well. Locate the tabs along the bottom of the wheel well above the frame, **(Figure 1)**. **NOTE:** The factory fender liner is attached to these tabs.
2. Select (3) 6mm Clip Nuts. Slide the Clip Nuts onto the (3) inner mounting tabs, **(Figure 1)**.
3. Select the Driver/Left Rear Fender Liner. Insert the Fender Liner into position up to the back of the inner body panel. **IMPORTANT:** If the vehicle has aftermarket fenders previously installed, it may be necessary to temporarily remove any hardware interfering with the Fender Liners. **NOTE:** It may be easier to install the Fender Liner with the vehicle raised up and/or rear tire removed.
4. Attach the bottom of the Fender Liner to the (3) 6mm Clip Nuts with (3) 6mm Button Head Combo Bolts, **(Figure 2)**. Do not tighten hardware.
5. Attach the Fender Liner to the (6) mounting locations with (6) 6mm Button Head Combo Bolts, **(Figures 3—5)**. Do not tighten hardware.
6. Align and adjust the Fender Liner. Fully tighten all hardware attaching the Fender Liner and fender.
7. Repeat **Steps 1—6** for Passenger/Right side Fender Liner installation.
8. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

To protect your investment, Do not use any type of polish or wax that may contain abrasives that could damage the finish. Mild soap may be used to clean the Fender Liners.


Driver/Left Side Installation Pictured




(Fig 1) Remove the factory clip nuts and slide (3) 6mm Clip Nuts onto the (3) mounting holes inside the wheel well

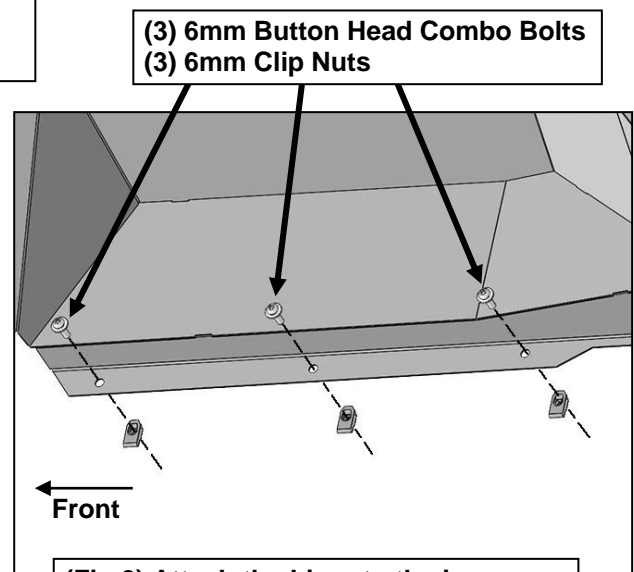


(Fig 2) Attach the Liner to the inner body panel. (NOTE: Slide the (3) Clip Nuts onto the panel first)

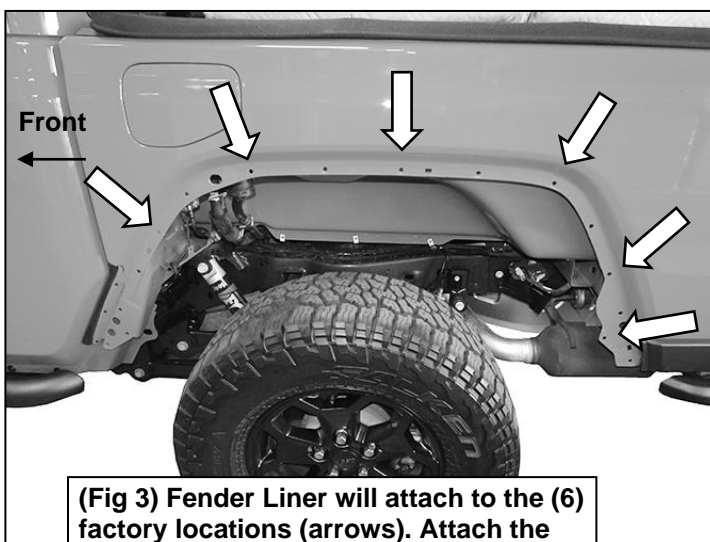

(Fig 3) Fender Liner will attach to the (6) factory locations (arrows). Attach the Fender Liner to these mounting points

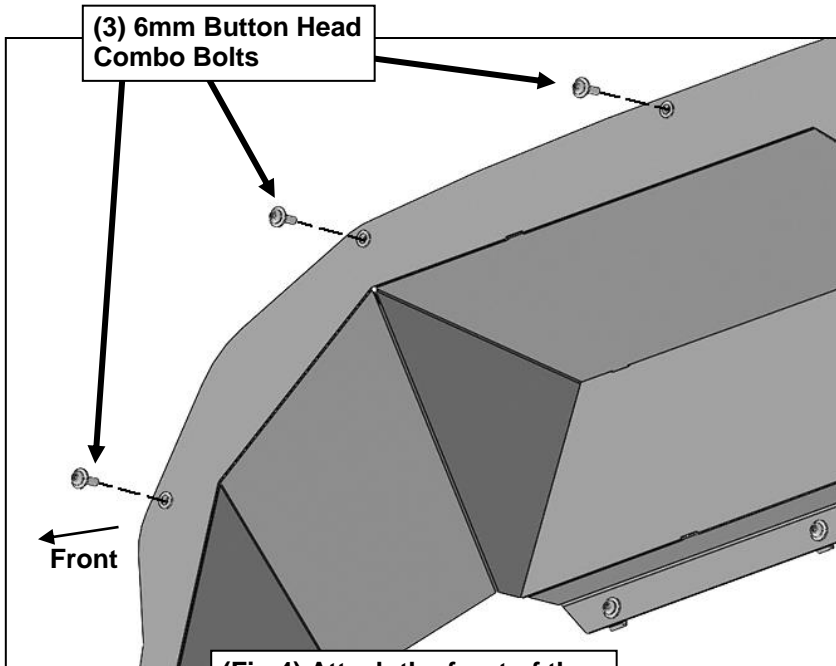

(Fig 4) Attach the front of the Fender Liner to the wheel well

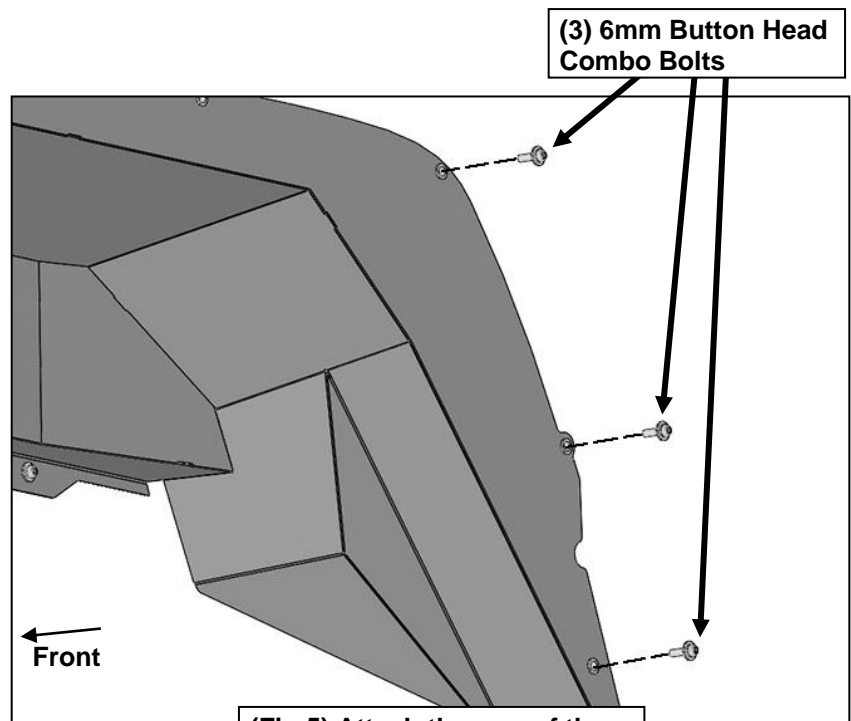

(Fig 5) Attach the rear of the Fender Liner to the wheel well